

FAULT TRACING

Engine does not start	Engine stops	Engine not reaching correct temp at full rpm	Engine runs roughly or vibrates abnormally	Engine becomes abnormally hot	Fault
●					Stop control not fully pushed back. Main switch not switched on. Flat battery. Broken electric wires. Main fuse blown.
●	●				Empty fuel tank, closed fuel cock or clogged fuel filter.
●	●		●		Water or impurities in the fuel. Faulty injectors or air in the fuel system.
		●			Boat abnormally loaded, clogged intake air filter or marine growth on the boat bottom.
		●	●		Engine not properly aligned. Propeller damaged.
				●	Clogged cooling water intake or water jackets in the exhaust manifold. Faulty impeller in sea-water pump. Faulty thermostat. Clogged cooling water pipe in the cylinder head.